

MODEL - 42-8035 & MA35XX


Cal. No. D060

FEATURES

- Digital Display
- Auto-Chronograph Timer
- Countdown Timer
- 1/100 Second Chrono
- Color Graphic Time Display
- Calendar
- Alarm
- 100 Meter Water-Resistant
- Light

BENEFITS

- Quick, accurate reading.
- Convenient, auto switch from timer to chronograph.
- Alerts to starting and ending time.
- Accurate timing.
- Graphic display of 30 sec. intervals.
- Displays day & date.
- 24 hour alarm.
- Water resistant for swimming.
- Night time reading of digital display.

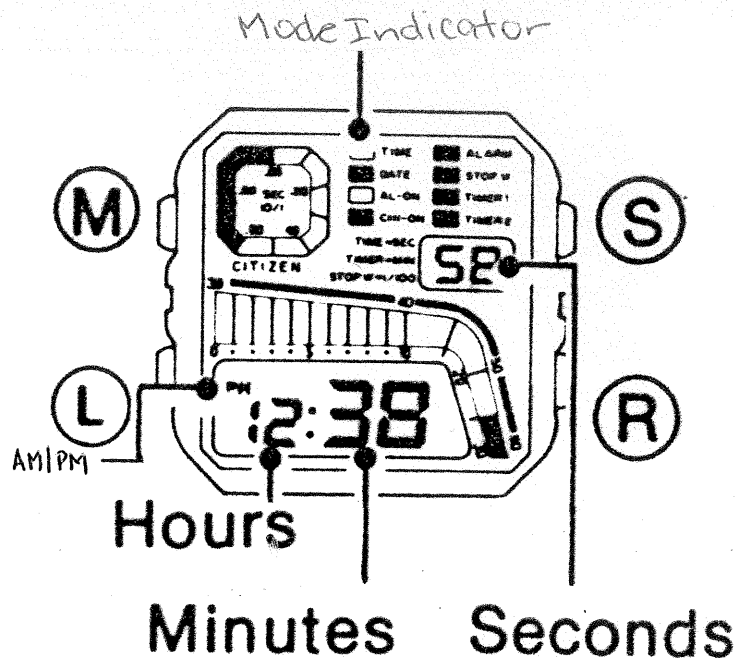

To Set Time and Calendar

- Press and release M Button until mode Indicator is on time. (Red indicates mode)
 - Press and hold S Button for 3 seconds, the seconds will blink in the small window.
 - Press and release R Button to reset seconds to zero.
 - Press and release S Button, the minutes will blink in large window.
 - Press R Button to correct.
 - Press and release S Button, the hour will blink.
 - Press R Button to correct.
 - Press and release S Button, the month will blink.
 - Press R Button to correct.
 - Press and release S Button, the date will blink.
 - Press R Button to correct.
 - Press and release S Button, the day will blink in small window.
 - Press R Button to correct.
 - Press and release S Button, 12 H or 24 H will blink.
 - Press and release R Button to select 12 or 24 hour display of time.
 - Press and release S Button to finalize setting.
- Note:** To display date, press and hold R Button.

To Set Alarm

- Press and release M Button until mode Indicator is on alarm.
- Press and hold S Button for 3 seconds, the hour will blink.
- Press R Button to correct.
- Press and release S Button, the minutes will blink.
- Press R Button to correct.
- Press and release S Button to finalize setting.

To Turn Alarm and Chime On

- Press and release M Button until mode indicator is on alarm.
- Press and release R Button until mode indicator next to AL-ON or CH-ON is red. This means these features are turned on. If the mode indicator next to AL-ON or CH-ON is black means that feature is turned off.

To Use Chronograph

- Press and release M Button until mode indicator is on chronograph (STOPW).
- Press and release R Button to reset if needed.
- Press and release S Button to start chronograph.
- Press and release R Button to take split time reading. Display will freeze but time keeping will continue.
- Press and release R Button to return to chronograph display.
- Press and release S Button to stop chronograph.

To Use Timer 1 (Auto-Chronograph)

- Press and release M Button until mode Indicator is on Timer 1.
 - Press R Button to set countdown time in 5 minute increments (60 minutes max.)
 - Press and release S Button to start countdown.
 - Press R Button any time during countdown to engage flyback feature.
 - Press and release S Button to stop countdown.
- Note:** Warning signals will sound at each point of 10, 5, 1 minute and 30, 20, 10, 5, 4, 3, 2, 1 second to time up. The watch will automatically start keeping track of elapsed time.

To Use Timer 2

- Press and release M Button until mode Indicator is on Timer 2.
- Press R Button to set countdown time in 1 minute increments (60 minutes max.)
- Press and release S Button to start countdown.
- Press R Button any time during countdown to engage flyback feature.
- Press and release S Button to stop countdown.
- For further instructions, see instruction manual.